

GF 27

Mobile GlassFix® Antenna for the 27 MHz Band

- Shortened half-wave mobile antenna for the 27 MHz band using the GlassFix® mounting principle.
- Mounting on car window glass – no holes required.

DESCRIPTION

- Double-adhesion procedure ensures fast and reliable fixing.
- Internal matching unit feeds external antenna through window glass.
- Half-wave design – no ground plane required.
- High positioning gives performance equal to conventionally mounted car roof antenna.
- FME FastCabling system (cable to be ordered separately).
- Simple tuning procedure by cutting top end of whip.
- Easy removable whip for car wash.
- Swivel joint for 180° angle adjustment.
- If removal of antenna installation is necessary, a quick dismantling procedure leaves no trace of the installation.

NOTE

GF antennas are not suitable for car models with windows that have heat reflective coating.

ORDERING DESIGNATIONS

TYPE	PRODUCT NO.
GF 27	130000597



SPECIFICATIONS

ELECTRICAL	
MODEL	GF 27
ANTENNA TYPE	Shortened $\frac{1}{2} \lambda$ mobile GlassFix® antenna
FREQUENCY	27 MHz band
IMPEDANCE	Nom. 50 Ω
POLARIZATION	Vertical
GAIN	Equal to shortened roof-mount antennas
BANDWIDTH	≥ 500 kHz @ SWR ≤ 1.7
SWR	≤ 1.5 @ f.res.
MAX. POWER	10 W
MECHANICAL	
MATERIALS	Whip: Stainless steel and black-chromed brass Mount and indoor unit: Weather- and shockproof plastics Corrosion-safe and corrosion-protected metals
CABLE	FME-cable to be ordered separately
COLOUR	Black
HEIGHT	Approx. 94 cm
WEIGHT	Approx. 140 g
MOUNTING	On car windows with silicone glue (52 mm x 47 mm obstruction-free mounting area required)
GLASS THICKNESS	2.5 – 7.0 mm

FME-SYSTEM ACCESSORIES

FME-CABLES


TYPE	PRODUCT NO.
1 m FME	130000437
2 m FME	130000447
3 m FME	130000457
4 m FME	130000466
5 m FME	130000474
6 m FME	130000483
4 m FME-white	110000064
6 m FME-white	110000066
12 m FME-white	110000068
18 m FME-white	110000069

FME-CONNECTORS

TYPE	PRODUCT NO.
FME-FME	130000583
FME-P (Prolongation)	130000565
FME-N	130000571
FME-FSMA (Female-SMA)	130000578
FME-BNC	130000566
FME-TNC	130000569
FME-UHF	130000572
FME-MUHF (Mini-UHF)	130000573
FME-EMUHF (Elbow-MUHF)	130000582
FME-EBNC (Elbow-BNC)	130000580
FME-SMA	130000577

For further information about other types of FME-cables and FME-connectors, please compare the cable and connector data sheets under accessories.

ASSEMBLY DETAILS

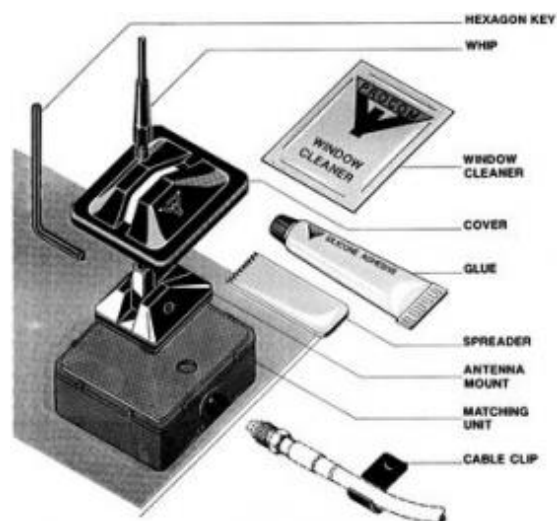

1. BEFORE INSTALLATION

- When selecting mounting location take into consideration: positions of back view mirror, wiper blade paths and defogger wires (when mounting on rear window). The driver's view should not be obstructed.
- Environmental- and car temperature must be above 15° C at installation, and surfaces to be glued must be dry and clean.

2. INSTALLATION



Do not use sealer on rubber gasket or other places.

3. AFTER INSTALLATION

- Allow the silicone gluings to dry off 2 hours at a temperature above 15° C. To ensure full strength of the glue, it is recommended to keep the whip off the mount for 24 hours.

4. TUNING INSTRUCTIONS

- Insert an SWR-meter between the transmitter and the antenna.
- Key the transmitter on ch. 1 and measure SWR.
- Remove the rubber top. Cut off the top end of the whip (approx. 1 cm at a time) until SWR is minimum.
- Key the transmitter on ch. 20. Cut off the top end of the whip (approx. 5 mm at a time) until SWR is minimum.
- Fit the rubber top. Tuning is completed.

REINSTALLATION KIT

A reinstallation kit including all necessary parts for transfer of the antenna to another vehicle is available under order No. »GF-RK«.

WARNING

SAFETY PRECAUTIONS

Antennas mounted on the windscreen may cause relatively high field strengths in the passenger cabin and near the dashboard.

1. To prevent health hazard due to RF radiation, persons must not be closer than 30 cm to the antenna whip (transmitter output power to the matching unit: 20 W). (DIN 57 848).

2. The RF signals at the dashboard may cause interference in the car's electronic equipment such as broadcast radio, computer automatics, braking systems, electronic ignition, relays etc. Some cars are more susceptible to disturbances than others. It is the responsibility of the installer to carry out a thorough check of the proper functioning under any conditions of such circuits before finishing installation.

The enclosed silicone adhesive contains acetic acid and fungicides. Keep out of reach of children and dispose properly.